

HOW TO?

Point Driver & Points

What is it used for?

The Point Driver and Points are used to secure your image inside the frame.

How do I install points in the point driver?

On each side of the point driver are small metal pegs. The pegs are in the reload location on the point driver. Pull the pegs up to the lock area on the point driver; turn counterclockwise. This will hold the point driver open so you can place the points in the slotted area.

Place your points (use the outline as a guide). Unwind your metal pegs. This safety catch will hold the points in place.

How do I use the point driver?

At the bottom of the point driver is a small jut out just below where the points are stored. The points shoot out from this location.

Using the point driver like a nail gun, point the small jut out towards the area you want to secure. Place it up against the frame. Pull the lever inside the point driver. A point will shoot out and lodge itself in the frame, thus pinning in your image.

Place points approximately three inches apart all the way around your frame.

Please be careful when using the point driver. Like a nail gun, the points come out with a force and can hurt you. Also, if you use glass, only use one point per side, then check to be sure you removed all the lint from inside the glass. More than likely, you will find lint the first two times you check. Once you are sure you have removed all the lint, then finish placing the points inside the frame.